
ScaleLink Pro 5 silent installation manual

General

The ScaleLink Pro 5 Ver.2.10 and later version support two different mode of installation.

1. Step by step installation (default)
2. Silent installation


This document explains how to install by using <2.silent installation> option.

Note: Updating ScaleLink Pro 5

You must uninstall the existing version of ScaleLink Pro 5 before installing the upper version if you update from ScaleLink Pro 5 Ver.2.04l or previous version to Ver.2.10 onwards or uninstall and re-install same version.

In these cases, Go to windows task tray and close “SLP Server” icon before you start uninstalling.

Right click the icon and then select [Exit] to close. Then uninstall ScaleLink Pro 5 from [Start] – [Control Panel] – [Program and Features].

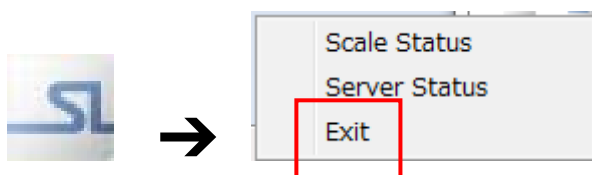

Meanwhile, you can install it without uninstalling if you update from Ver.2.10 onwards. Just execute installation program to update automatically.

Preparation

1. Extract the contents of the "*SLP5_***.zip*" (**** = Version*) file into directory of your choice.
 - ◆ *SLP5_***.exe* (**** = Version*)
Installation program
 - ◆ *Slp5Install.ini*
Predefined setup file for silent installation
 - ◆ *Create_CopyFiles.bat*
This creates "*CopyFiles*" folder. This is used to copy all files in this folder to the specified path specified in "*Slp5Install.ini*" - <11: FileCopyPath> during installation.
Refer to the following **Explanation of each parameter** for details.
2. Open "*Slp5Install.ini*" and edit each parameter according to requirement.
This file must be encoded by Unicode (UTF-16).

<Sample>

```
[InstallInfo]
InstallType=1
SystemType=0
InstallPath=C:\¥SLP¥SLP5
SetupFile=0
Country=7
Language=2
Logo=123.bmp
LabelFormatLibraryFile=MasterLibrary.lib
DatabaseFile=C:\¥SLP¥SLP5¥Database¥SlpNet.mdb
InitialDatabase=D:\¥Restore¥Restore.mdb
FileCopyPath=C:\¥SLP¥SLP5¥ScaleLibraries
```

Refer to following **Explanation of each parameter** for details.

3. Execute "*Create_CopyFiles.bat*" and make sure to create "*CopyFiles*" folder, if required.
4. Put any files in "*CopyFiles*" folder, if required.

Explanation of each parameter

No.	Parameter	Meaning
1	InstallType	<ul style="list-style-type: none">- Select installation type.- Install by step by step installation if omitted or specify other than 0 or 1. 0: Step by step installation (Default) 1: Silent Installation
2	SystemType	<ul style="list-style-type: none">- Select system type.- Install client and server if omitted or specify other than 0 or 1. 0: Client and server (Default) 1: Client only
3	InstallPath	<ul style="list-style-type: none">- Specify ScaleLink Pro 5 installation path.- Install at default path if omitted. 32bit OS: C:\Program Files\Ishida\ScaleLink Pro 5, 64 bit OS: C:\Program Files (x86)\Ishida\ScaleLink Pro 5- It appears an error message during installation if specify the path where cannot create.
4	SetupFile	<ul style="list-style-type: none">- Select default setup file or customized setup file to load. 0: Default setup (Default) 1: Customize setup <ul style="list-style-type: none">- Load one of the default setup file according to <5: Country> if specify 0: Default setup. Use default USA.set if omitted.- Load customized setup file if specify 1: Customize setup. The customized setup file must be store to the same path with “SLP5_***.exe (*** = Version)”. Use default USA.set if no setup file exist when specify customize setup. Load the first setup file in order if exists more than two setup files.



No.	Parameter	Meaning
5	Country	<ul style="list-style-type: none">- Select default setup file.- This is available when <4: SetupFile> = 0. Use default USA.set if omitted or specify unexpected value. <p>0: Australia 1: Baltic Countries 2: China 3: Hong Kong 4: Hungary 5: Indonesia 6: Malaysia 7: Western Europe 8: New Zealand 9: Philippines 10: Singapore 11: South Africa 12: South America 13: Taiwan 14: Thailand 15: USA (Default) 16: Canada 17: Eastern Europe 18: Cyrillic 19: Greece 20: Turkey 21: Mexico 22: India 23: Argentina 24:Finland</p>

No.	Parameter	Meaning
6	Language	<ul style="list-style-type: none"> - Select language. Use English if omitted or specify unexpected value. <p>0: Chinese 1: Chinese Traditional 2: English (Default) 3: French 4: Spanish 5: Russian 6: Bulgarian 7: Dutch 8: Italian 9: Finnish 10: Turkish 11: Swedish 12: Thai * N/A Ver.2.10, 2.10a and 2.10b.</p>
7	Logo	<ul style="list-style-type: none"> - Specify logo file name to apply logo on the ScaleLink Pro 5 main screen. - The logo file must be store to the same path with “SLP5_***.exe (*** = Version)”. - Do not apply logo if omitted or do not exist specified logo file.
8	LabelFormatLibraryFile	<ul style="list-style-type: none"> - Specify label format library file (.lib) to restore label format to database automatically after installing. - The library file must be stored to the same path with “SLP5_***.exe (*** = Version)”. - Do not restore label format if omitted or do not exist specified library file.
9	DatabaseFile	<ul style="list-style-type: none"> - Specify the file path to create database file. - Creates the path automatically if specified path does not exist. - Use default database file if omitted. - It appears error message when specify the path where cannot create. <p>(e.g) DatabaseFile=C:\\$SLP\\$SLP5¥Database¥SlpNet.mdb</p>


No.	Parameter	Meaning
10	InitialDatabase	<ul style="list-style-type: none">- Specify the main database backup file path to restore to the database after installing.- Production and sales transaction database are also able to be restored with above setting if these backup database files exist at the specified path.- Do not restore if omitted. <p><i>(e.g.) InitialDatabase=D:\RestoreRestore.mdb</i></p> <ul style="list-style-type: none">- In this case, the ScaleLink Pto 5 restores maindatabase (Restore.mdb), production database (RestoreProd.mdb) and sales transaction database (RestoreSTran.mdb) to the path where specified in <9: DatabaseFile>.
11	FileCopyPath	<ul style="list-style-type: none">- Specify the path to copy all files in “CopyFiles” folder.- Creates the path automatically if specified path does not exist.- Skip this process if omitted, “CopyFiles” folder does not exist or there is no file in “CopyFiles” folder.

Installation Procedure

1. Execute “*SLP5_***.exe*” starts to install ScaleLink Pro 5, and then finishes automatically.
Step by step installation starts if <1: InstallType> = 0 in “*Slp5Install.ini*”.
2. Following windows appear during installation. Do not click on these windows.

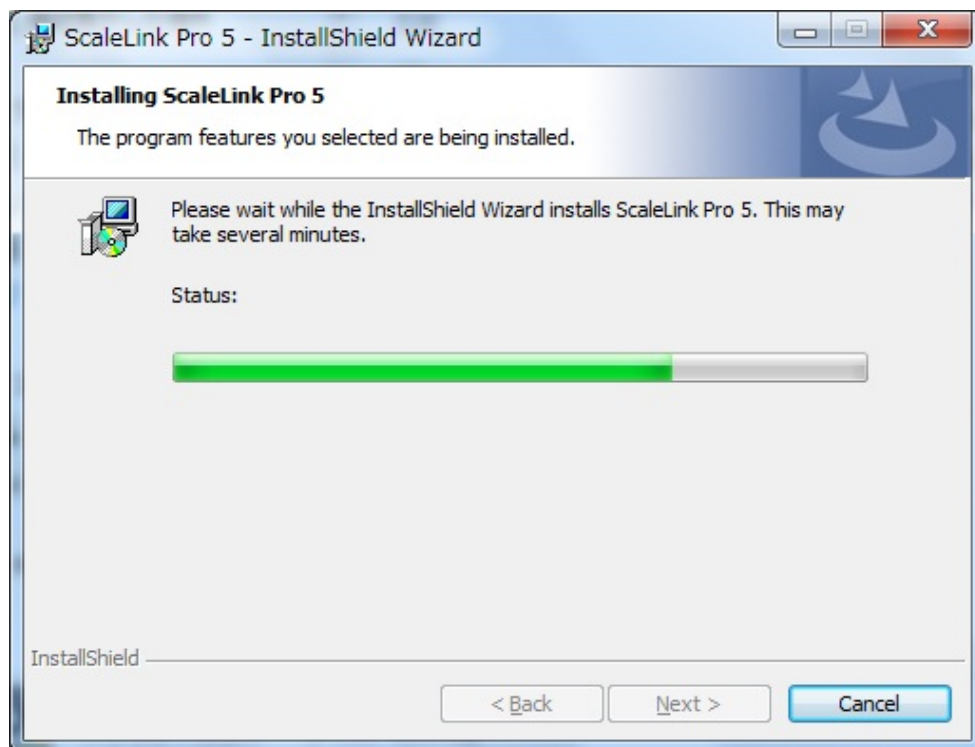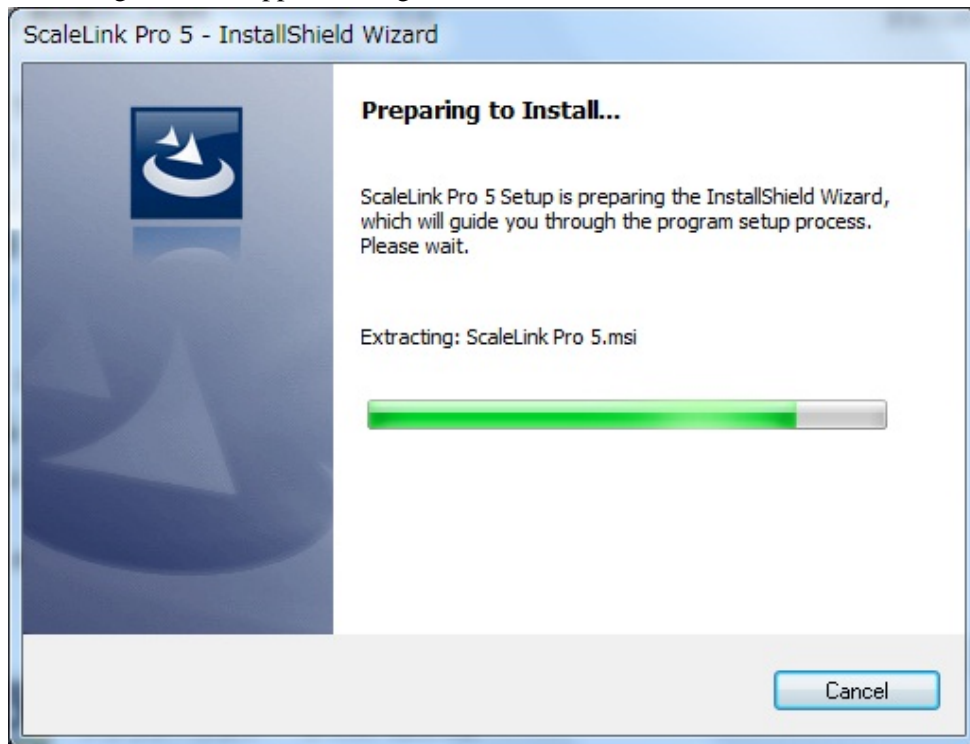

- The following window appears when execute ScaleLink Pro 5 from desktop icon first time. It creates database file and restore backup data and label format library. It may take an amount of time when file size is large.

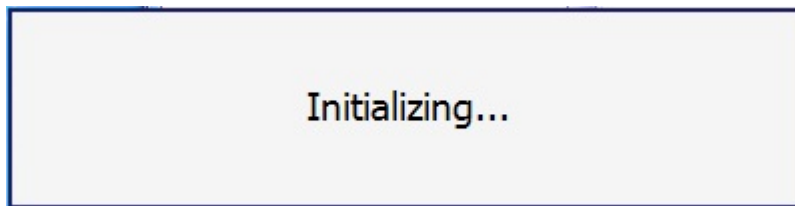

- ScaleLink Pro 5 opens the login window. Select your user name, enter the password and then click [Login].

